



Pos	Code	Description
0001	70146	BIG HOPPER LID
0002	70145	HOPPER SHUTTER
0003	90166	BIG HOPPER WITH SHUTTER
0004	90325	DISPLAY SUPPORT
0005	50271	TOUCH SCREEN
0006	50276	SERIAL CONNECTOR
0007	45323	NUT
0008	90180	SWITCH ASSEMBLY
0009	20365	BRACKET
0010	75548	FILTER-HOLDER REST
0011	40246	PIN
0012	70163	TRAY
0013	70173	RUBBER PEG
0014	70245	HOPPER SUPPORT
0015	85175	GRADUATED DISK
0016	70239	GRIND ADJUSTMENT DISK
0017	90342	QUICK SET GEAR ASSEMBLY
0018	75530	GASKET
0019	90399	INDICATOR
0020	90376	ADJUSTMENT ASSEMBLY
0021	70240	KNOB
0022	85130	SERIGRAPHY
0023	912087	SCREW
0024	90306	BURRS
0025	40319	NUT
0026	746822	WASHER
0027	50236	THERMOSTAT
0028	10471	DRIVE HUB
0029	20369	BRACKET
0030	45516	FLAP
0031	90286	MOTOR ASSEMBLY
0032	70165	SPOUT RUBBER ELEMENT
0033	20387	SPOUT
0034	75165	BUFFER
0035	40315	PIN
0036	75188	FIXING KNOB
0037	50368	WIRING
0038	70241	SHUFFLE SNOOT
0039	80121	BOX
0040	50108	SWITCH
0041	11411	GRINDER BODY
0042	50266	RELAY
0043	75146	PIN
0044	75164	SUPPORT
0045	50219	CAPACITOR
0046	20349	MOTOR BASE
0047	50286	ELECTRONIC BOARD
0048	20377	BRACKET
0049	50493	FAN
0050	50161	CORD CLAMP

Pos	Code	Description
0051	75205	PIN
0052	20376	PLATE
0053	90457	MICROSWITCH
0054	20332	BRACKET
0055	70138	FOOT
0056	50213	CORD